
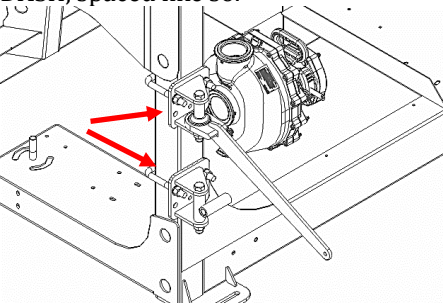
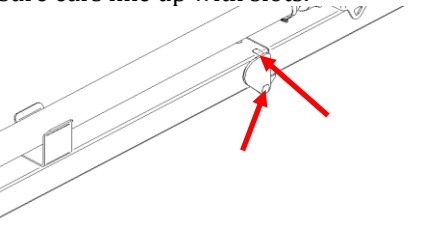
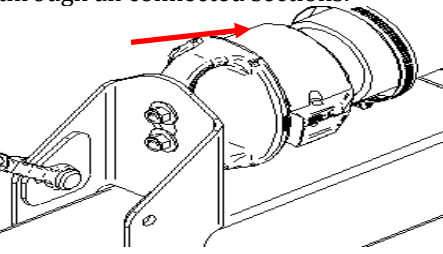
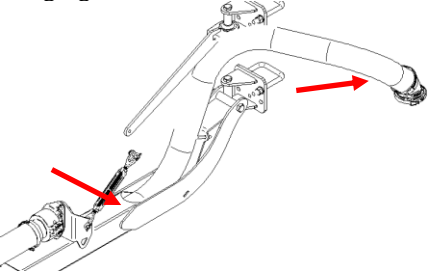
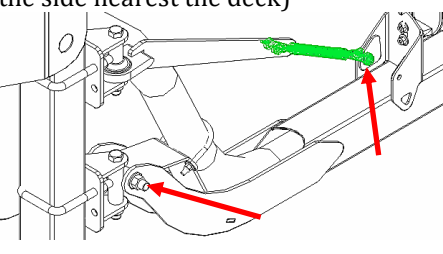
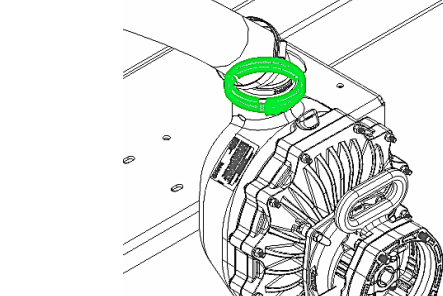
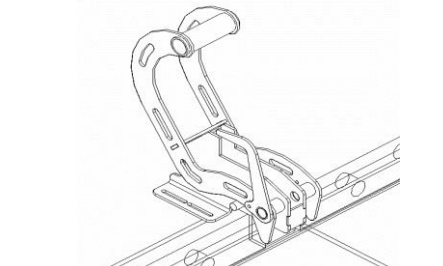
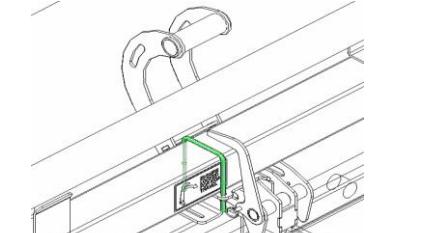


Quick Start Guide – KIT400158 BOOM ARM KIT SECTIONAL


Installation

<p>1 -</p> <p>Attach the mounting brackets to the DASH, spaced like so.</p> 	<p>2 -</p> <p>Attach the sections together with provided 1/2" x 1-1/4" bolts and make sure ears line up with slots.</p> 	<p>3 -</p> <p>Install CMP400232 at the end and leave the hose open to push the boom through all connected sections.</p> 
<p>4 -</p> <p>Start pushing the open end of the hose through the boom and leave 4 ft hanging out.</p> 	<p>5 -</p> <p>Attach the boom to the bottom bracket. Attach the tie rod on the top bracket to the appropriate hole on the boom (on the side nearest the deck)</p> 	<p>6 -</p> <p>Attach the near end of the hose to the DASH pump, using a clamp and gasket.</p> 
<p>7 -</p> <p>Put the latch assembly on the trailer deck, close to the edge of the deck.</p> 	<p>8 -</p> <p>Slide the boom ramp onto the latch. Slide the ramp along the boom and adjust the tie rod until the boom sits comfortably in the latch & fasten it.</p> 	<p>12 -</p> <p>Use the 3/8" U-bolts to secure the hose, once the lengths are adjusted as desired.</p> 

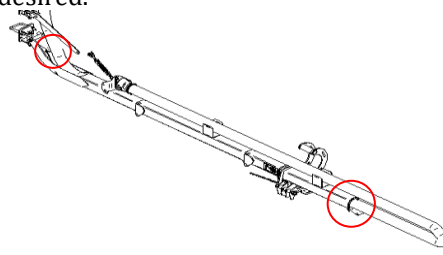

P.O. Box 58, Crystal City, MB R0K 0N0 / P.O Box 54, Sarles, ND 58372

Product Use

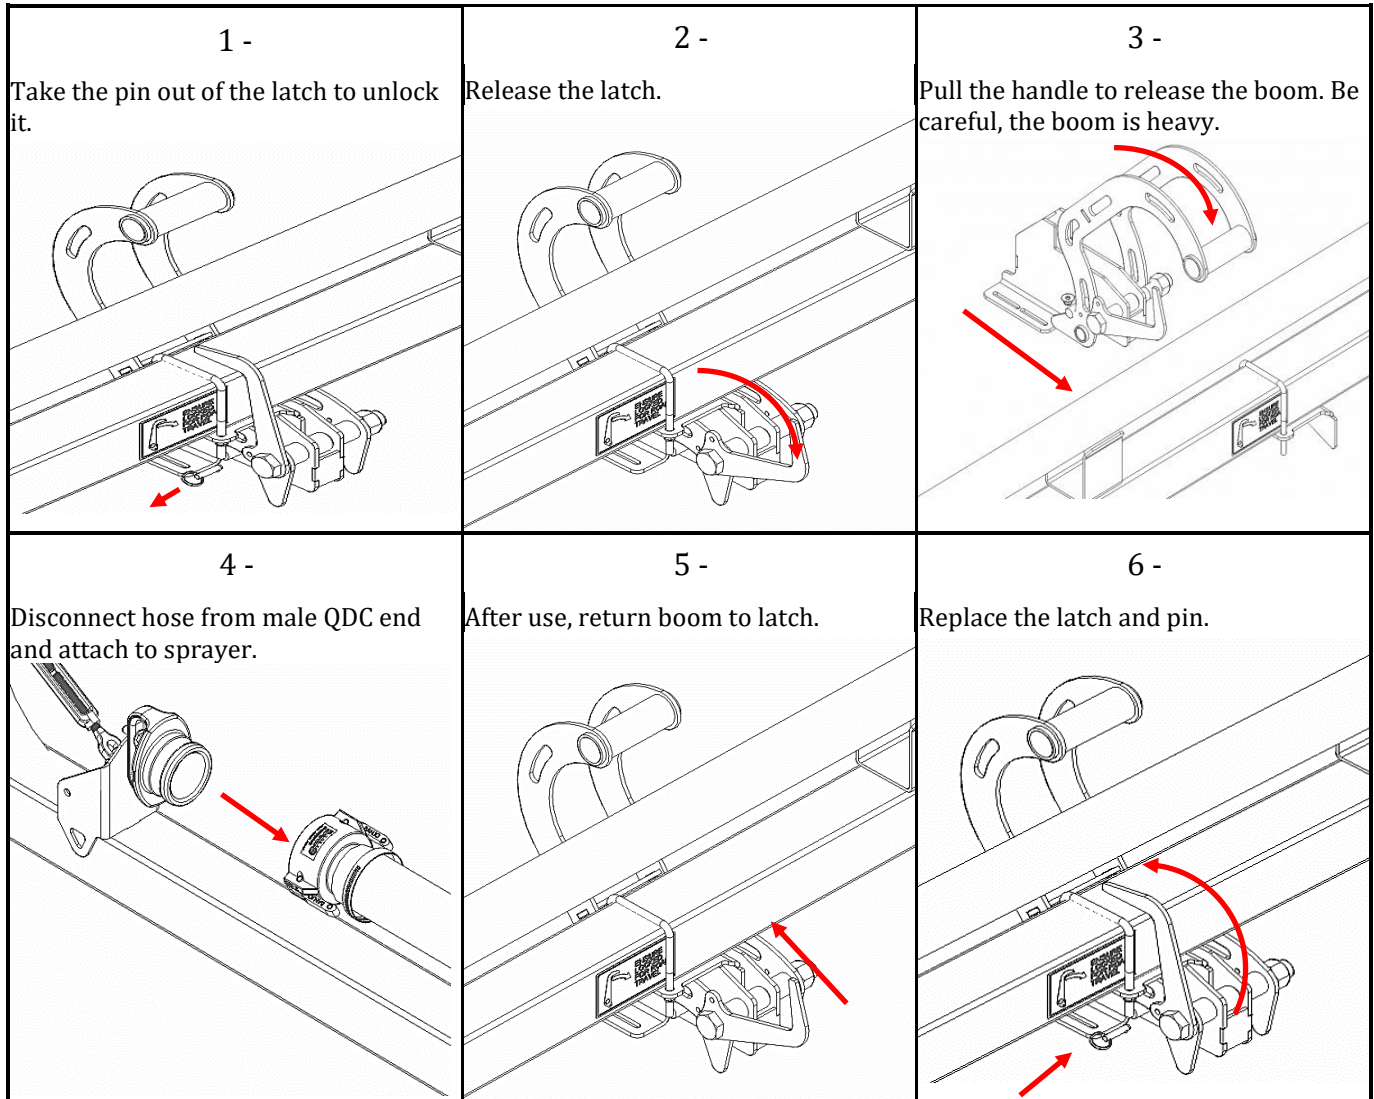

DOC400102

INNOVATIVE DESIGN • PARTNERS IN EFFICIENCY

866.264.8030 | PhiBer.ca